


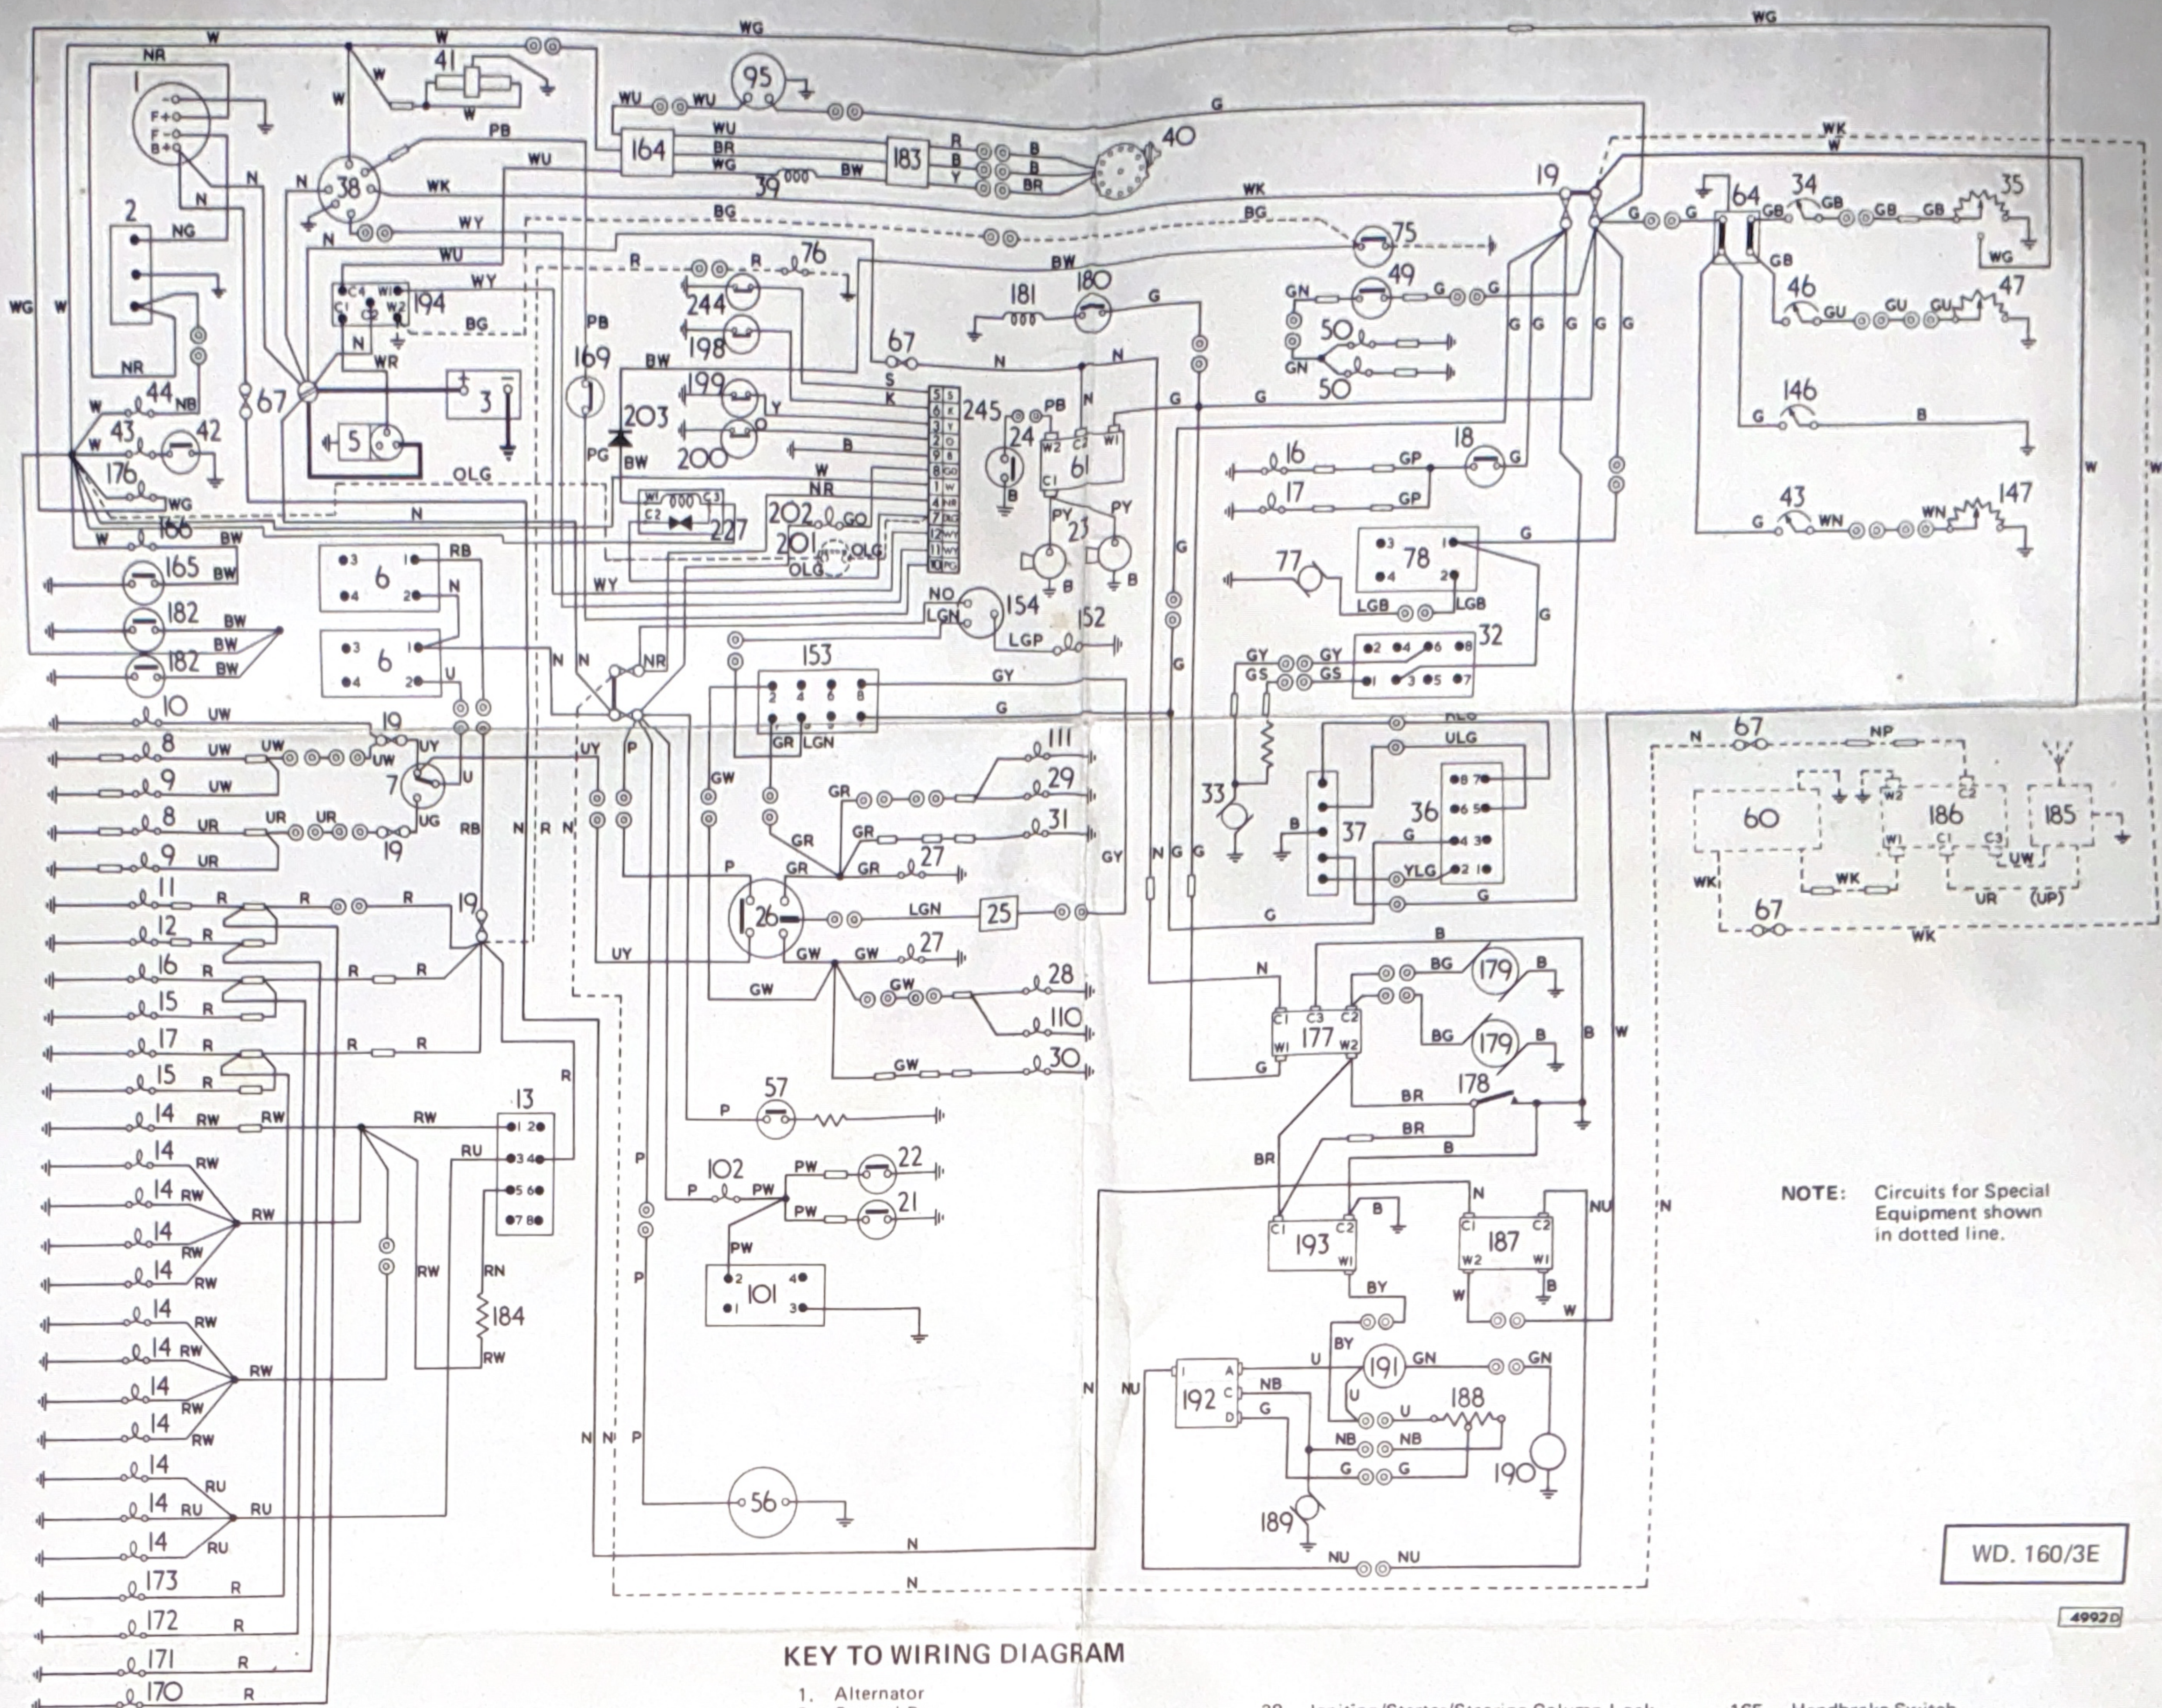

NOTE: Circuits for Special Equipment shown in dotted line.


WD. 160/3E

4992D

CABLE COLOUR CODE

N. Brown P. Purple W. White
U. Blue G. Green Y. Yellow
R. Red L. Light Green B. Black
K. Pink S. Slate

When a cable has two colour code letters, the first denotes the Main Colour and the second the Tracer Colour.

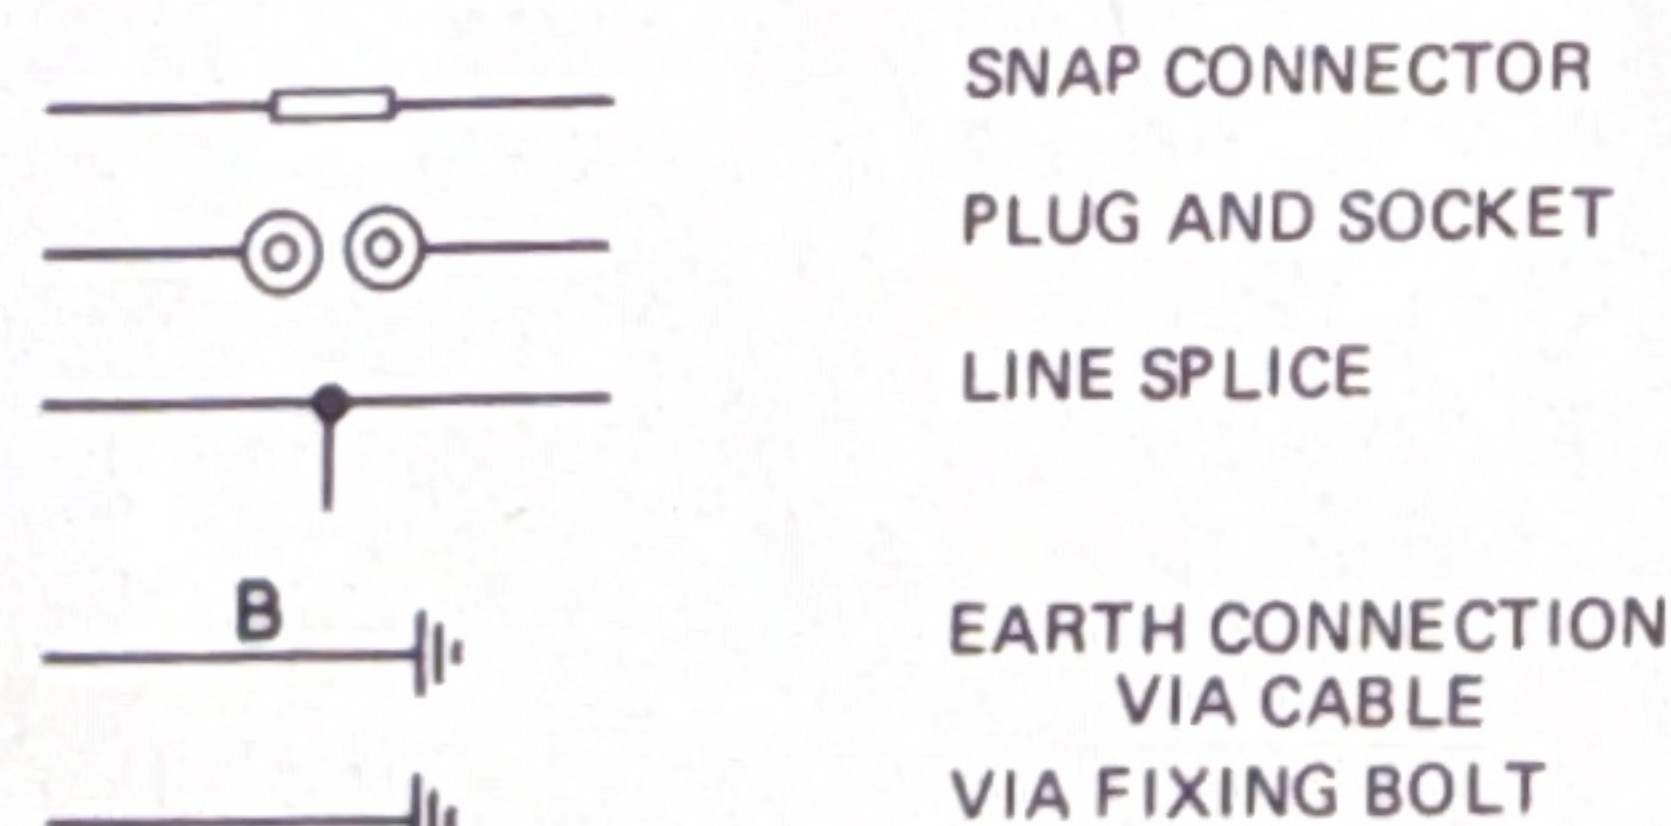

KEY TO WIRING DIAGRAM

1. Alternator
2. Control Box
3. Battery (12 volt)
5. Starter Motor
6. Lighting Switch
7. Headlamp Dip Switch
8. R. H. Headlamp
9. L. H. Headlamp
10. Main Beam Warning Lamp
11. R. H. Sidelamp
12. L. H. Sidelamp
13. Panel Lamps Switch
14. Panel Lamps
15. Number Plate Illumination Lamp
16. R.H. Stop & Tail Lamp
17. L.H. Stop & Tail Lamp
18. Stop Lamp Switch
19. Fuse Unit 2 Way
21. R.H. Door Switch
22. L.H. Door Switch
23. Horns
24. Horn Push
25. Flasher Unit
26. Direction Indicator Switch
27. Direction Indicator Warning Lamps
28. R.H. Front Flasher Lamp
29. L.H. Front Flasher Lamp
30. R.H. Rear Flasher Lamp
31. L.H. Rear Flasher Lamp
32. Heater Switch
33. Heater Motor(s)
34. Fuel Gauge
35. Fuel Gauge Tank Unit
36. Windscreen Wiper Switch
37. Windscreen Wiper Motor
38. Ignition/Starter/Steering Column Lock Switch
39. Ignition Coil
40. Distributor
41. Fuel Pump
42. Oil Pressure Switch
43. Oil Pressure Gauge
44. Ignition Warning Lamp
46. Water Temperature Gauge
47. Water Temperature Transmitter
49. Reverse Lamp Switch
50. Reverse Lamps
56. Clock
57. Cigar Lighter
60. Radio (If Fitted)
61. Horn Relay
64. Bi-metal Instrument Voltage Stabiliser
67. Line Fuse
75. Automatic Gearbox Safety Switch
76. Automatic Gearbox Gear Selector Indicator Lamp
77. Electric Windscreen Washer
78. Electric Windscreen Washer Switch
95. Revolution Counter
101. Map Light Switch
102. Map Light
110. R.H. Repeater Flasher
111. L.H. Repeater Flasher
146. Battery Condition Indicator
147. Oil Pressure Transmitter
152. Hazard Warning Lamp
153. Hazard Warning Switch
154. Hazard Warning Flasher Unit
164. Ballast Resistor
165. Handbrake Switch
166. Handbrake Warning Lamp
169. Buzzer Door Switch
170. R.H. Front Marker
171. L.H. Front Marker
172. R.H. Rear Marker
173. L.H. Rear Marker
176. Low Fuel Warning Light
177. Radiator Cooling Fan Relay
178. Radiator Cooling Fan Thermostat
179. Radiator Cooling Fan Motor
180. Auto Trans. Kickdown Switch
181. Auto Trans. Kickdown Solenoid
182. Brake Fluid Level Switch
183. Opus Ignition Amplifier
184. Panel Light Resistor
185. Aerial Motor (if fitted)
186. Aerial Motor Relay (if fitted)
187. Main relay - air conditioning
188. Air Conditioning Resistor
189. Air Conditioning Motor
190. Air Conditioning Compressor
191. Air Conditioning Thermostat Switch
192. Air Conditioning Control Switch
193. Radiator Cooling Fan Thermostat Relay
194. Starter Solenoid/Ballast Coil Relay
198. Driver Seat Belt Switch
199. Passenger Seat Belt Switch
200. Passenger Seat Switch
201. Seat Belt Warning G.B. Switch
202. Seat Belt Warning Lamp
203. Blocking Diode-Seat Belt Warning
227. Seat Belt Relay
244. Driver's Seat Switch
245. Sequential Seat Belt Control Unit