


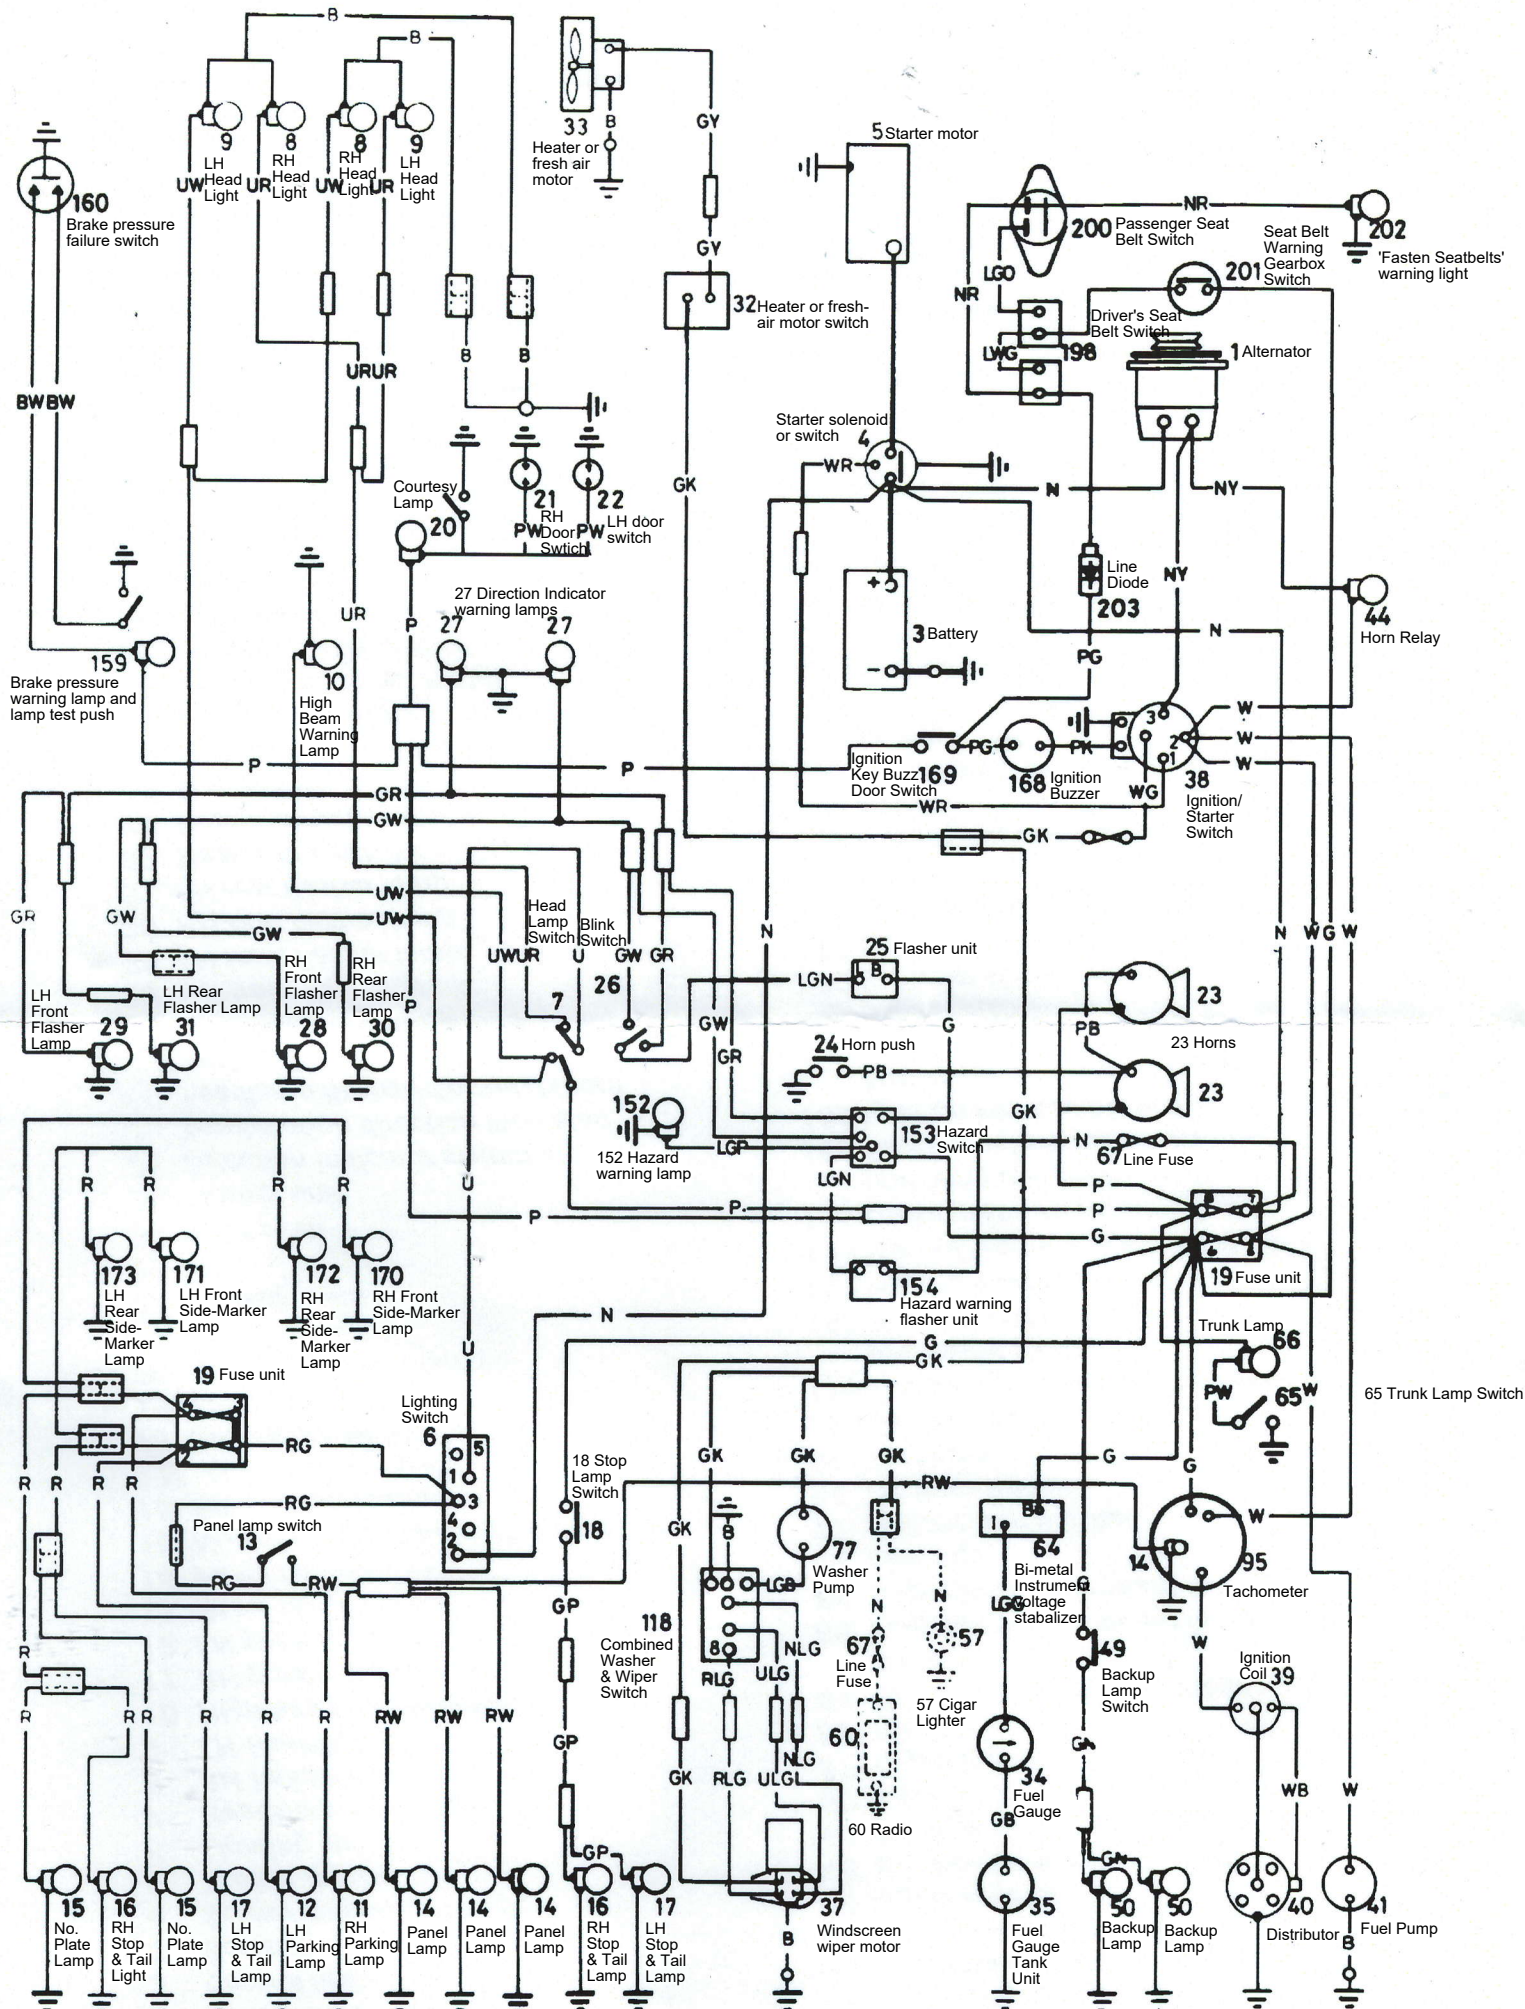

- | | | | |
|----|---|-----|--|
| 1 | Dynamo/alternator | 42 | Horn relay |
| 2 | Control box | 43 | Oil pressure gauge |
| 3 | Battery | 44 | Ignition warning lamp |
| 4 | Starter solenoid or switch | 45 | Speedometer |
| 5 | Starter motor | 46 | Coolant temperature gauge |
| 6 | Lighting switch | 49 | Reverse lamp switch |
| 7 | Headlamp dipswitch | 50 | Reverse lamp |
| 8 | RH headlamp | 57 | Cigar lighter – illuminated |
| 9 | LH headlamp | 60 | Radio |
| 10 | High beam warning lamp | 64 | Bi-metal instrument voltage stabilizer |
| 11 | RH parking lamp | 65 | Luggage compartment lamp switch |
| 12 | LH parking lamp | 66 | Luggage compartment lamp |
| 13 | Panel lamp switch | 67 | Line fuse |
| 14 | Panel lamps | 77 | Windscreen washer pump |
| 15 | Number plate illumination lamp | 94 | Oil filter switch |
| 16 | RH stop and tail lamp | 95 | Tachometer |
| 17 | LH stop and tail lamp | 105 | Oil filter warning lamp |
| 18 | Stop-lamp switch | 118 | Combined windscreen washer and wiper switch |
| 19 | Fuse unit | 152 | Hazard warning lamp |
| 20 | Interior courtesy lamp | 153 | Hazard warning switch |
| 21 | RH door switch | 154 | Hazard warning flasher unit |
| 22 | LH door switch | 159 | Brake pressure warning lamp and lamp test push |
| 23 | Horn(s) | 160 | Brake pressure failure switch |
| 24 | Horn push | 168 | Ignition key audible warning buzzer |
| 25 | Flasher unit | 169 | Ignition key audible warning door switch |
| 26 | Direction indicator switch or combination direction indicator/headlamp flasher/dipswitch/horn push switch | 170 | RH front side-marker lamp |
| 27 | Direction indicator warning lamp | 171 | LH front side-marker lamp |
| 28 | RH front flasher lamp | 172 | RH rear side-marker lamp |
| 29 | LH front flasher lamp | 173 | LH rear side-marker lamp |
| 30 | RH rear flasher lamp | 198 | Driver's seat belt buckle switch |
| 31 | LH rear flasher lamp | 199 | Passenger's seat belt buckle switch |
| 32 | Heater or fresh-air motor switch | 200 | Passenger seat switch |
| 33 | Heater or fresh-air motor | 201 | Seat belt warning gearbox switch |
| 34 | Fuel gauge | 202 | 'Fasten belts' warning light |
| 35 | Fuel gauge tank unit | 203 | Line diode |
| 36 | Windscreen wiper switch | | |
| 37 | Windscreen wiper motor | | |
| 38 | Ignition/starter switch | | |
| 39 | Ignition coil | | |
| 40 | Distributor | | |
| 41 | Fuel pump | | |

Colour code for all wiring diagrams

B	Black	P	Purple
G	Green	R	Red
K	Pink	S	Slate
LG	Light green	U	Blue
N	Brown	W	White
O	Orange	Y	Yellow

When a cable has two colour code letters, the first denotes the main colour and the second denotes the tracer colour