

1978 MG Midget Wiring Color KEY.pdf

- | | |
|---------------------------------------|-----------------------------------|
| 1. RH front indicator lamp | 41. LH sidelamp |
| 2. Stop lamp switch | 42. LH front direction indicator |
| 3. Reverse lamp switch | 43. Starter motor |
| 4. Interior lamp door switches | 44. Starter solenoid |
| 5. RH rear indicator lamp | 45. Heater motor switch |
| 6. RH tail lamp | 46. Instrument voltage stabilizer |
| 7. Stop lamps | 47. Windscreen wiper motor |
| 8. RH sidelamp | 48. Coolant temperature gauge |
| 9. Headlight main beam | 49. Fuel gauge |
| 10. Headlamp dip beam | 50. Lighting switch |
| 11. Horn | 51. Panel lamp switch |
| 12. Distributor | 52. Interior courtesy lamp |
| 13. Ignition coil | 53. Radio |
| 14. Fuse unit (4-way) | 54. Line fuse for radio |
| 15. Oil pressure switch | 55. LH rear indicator lamp |
| 16. Line fuse for hazard warning | 56. LH tail lamp |
| 17. Headlamp flasher switch | |
| 18. Direction indicator switch | |
| 19. Horn push | |
| 20. Headlamp dipswitch | |
| 21. Fuel gauge tank unit | |
| 22. Luggage compartment lamp switch | |
| 23. Reverse switch | |
| 24. Alternator | |
| 25. Coolant temperature transmitter | |
| 26. Direction indicator warning lamps | |
| 27. Main beam warning light | |
| 28. Panel lamp | |
| 29. Ignition warning light | |
| 30. Oil pressure warning light | |
| 31. Flasher unit | |
| 32. Luggage compartment lamp | |
| 33. Number plate illumination lamp | |
| 34. Battery | |
| 35. Heater motor | |
| 36. Windscreen wiper switch | |
| 37. Tachometer | |
| 38. Ignition/starter switch | |
| 39. Hazard warning flasher unit | |
| 40. Hazard warning switch | |