


PLATE CT

A-TYPE OVERDRIVE UNITS
AND REBUILD COMPONENTS

TRIUMPH TR6

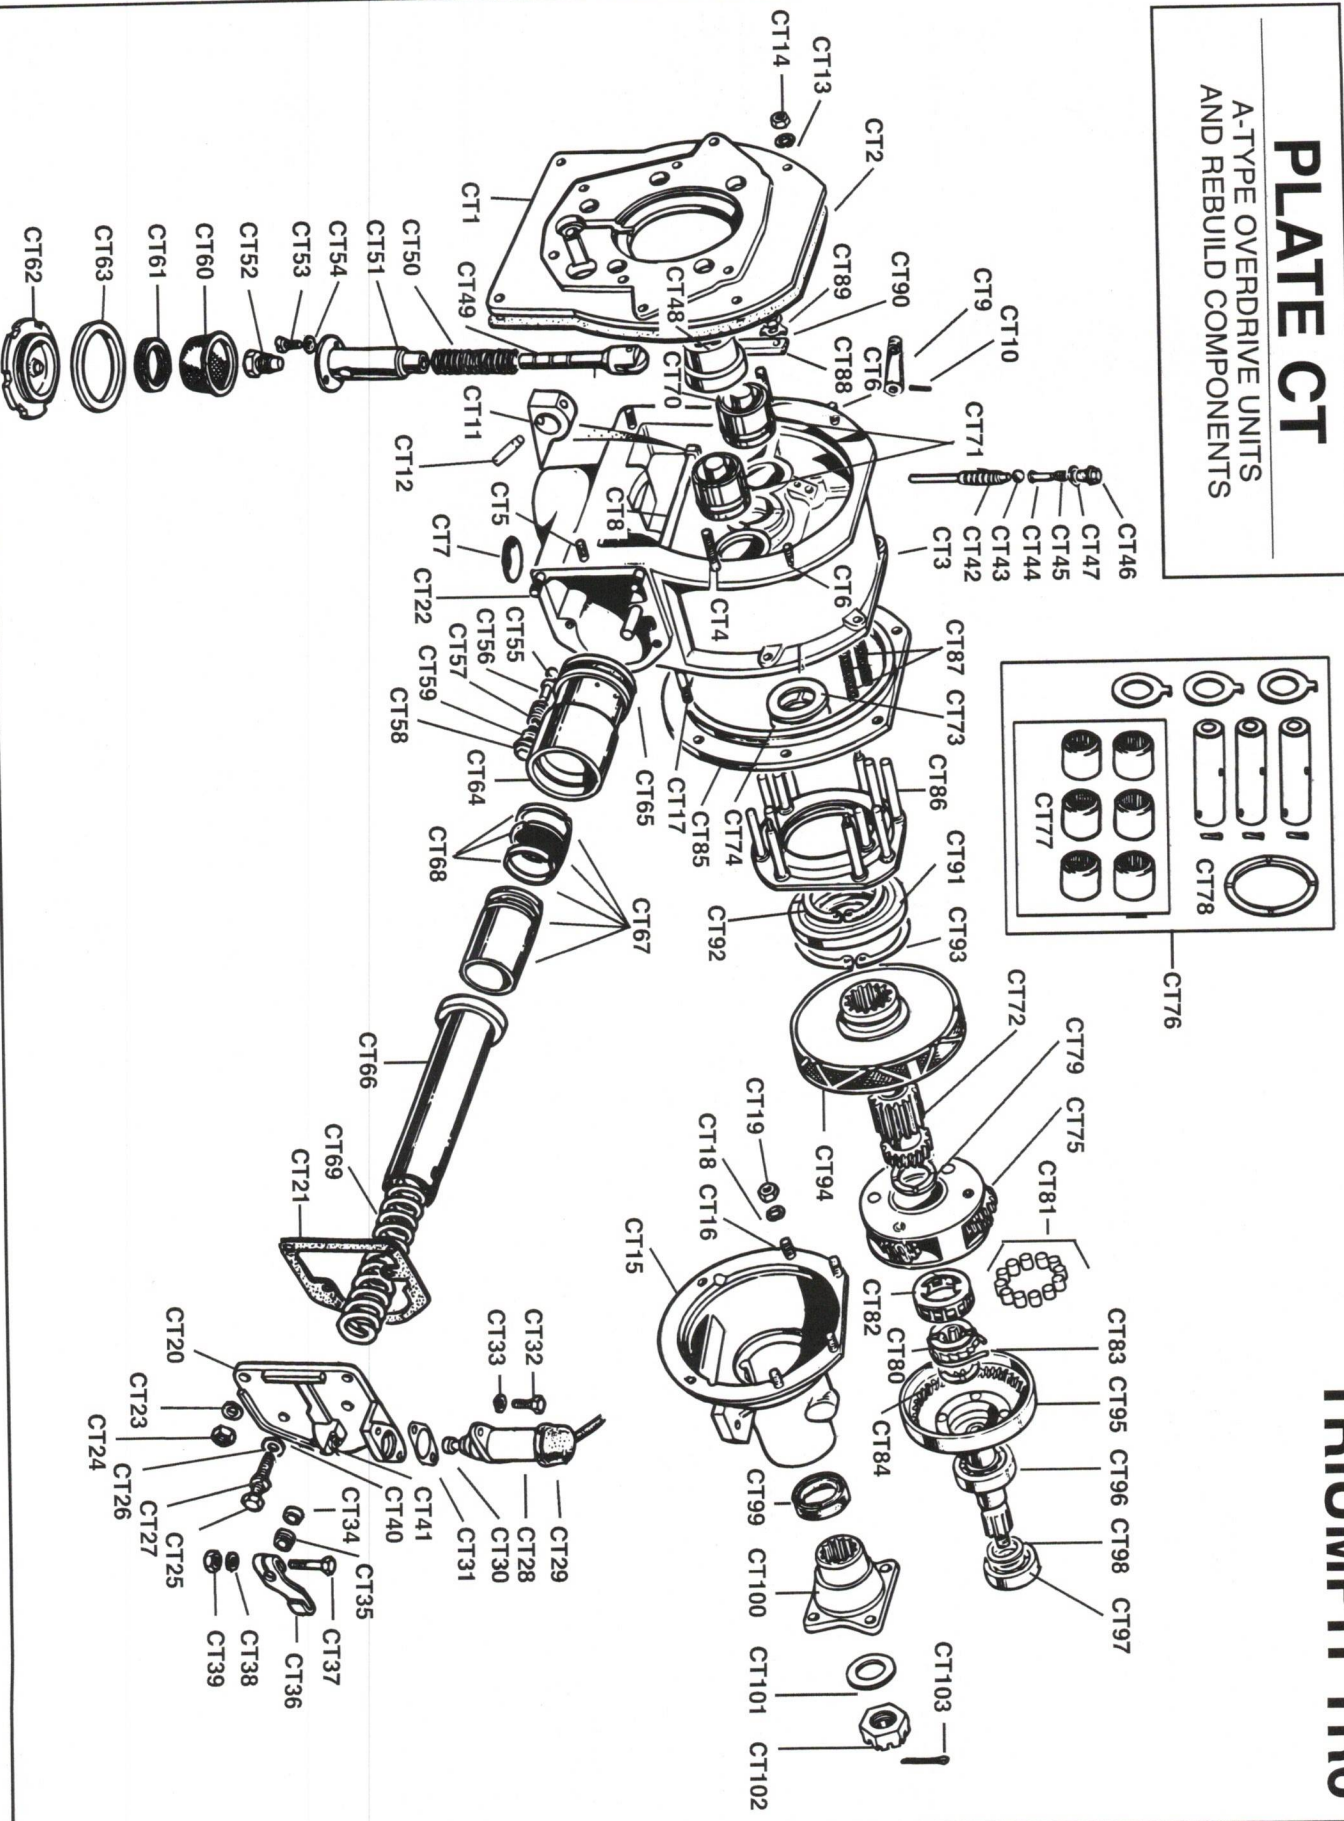

A-TYPE OVERDRIVE CONVERSION COMPONENTS, FITTED UP TO COMM.NO. CF/CR1

Plate No.	Part No.	Description	No. Off	Plate No.	Part No.	Description	No. Off
	307603	OVERDRIVE UNIT, Laycock Type A, fitted up to mid-1969	1			OVERDRIVE UNIT-Continued	
	309159	OVERDRIVE UNIT, Laycock Type A, serial nos. -61753-- fitted from mid-1969 up to mid-1971	1			OVERDRIVE HOUSING DETAILS-Continued	
	312373	OVERDRIVE UNIT, Laycock Type A, serial nos. -61985-- fitted from mid-1971 up to comm. no. CF-1	1			HARDWARE, securing bracket assembly to main body housing	2
	307603R	FACTORY REBUILT OVERDRIVE UNIT, Laycock Type A OVERDRIVE HOUSING DETAILS	1	CT22	500577	Stud	2
CT1	208098	Plate, adaptor, overdrive unit to gearbox, fitted up to mid-1969	1	CT23	WL208	Washer, lock	2
	500654	Plate, adaptor, overdrive unit to gearbox, fitted after mid-1969	1	CT24	HN2008	Nut	2
CT2	502556	Gasket, between adaptor plate and main body housing	1	CT25	103268	Screw, set	2
CT3	503159	MAIN BODY HOUSING, for overdrives with 61753 serial numbers	1	CT26	WP8	Washer, plain	2
	520679	MAIN BODY HOUSING, for overdrives with 61985 serial numbers	1	CT27	WL208	Washer, lock	2
CT4	500576	Stud, 2 5/8 inch length	2	CT28	112946	SOLENOID DETAILS	
CT5	500666	Stud, 1 inch length	1	CT29	109521	SOLENOID ASSEMBLY	1
CT6	500578	Stud, 1 1/4 inch length	3	CT30	105921	Cover, rubber, solenoid	1
CT7	500570	Plug, Welch, in housing	1	CT31	513201	Boot, solenoid plunger	1
CT8	513908	Shaft, valve operating	1			Gasket, between solenoid and solenoid bracket	1
CT9	513909	Lever, setting, on shaft	1	CT32	513226	HARDWARE, securing solenoid to bracket	2
CT10	513888	Dowel, spring, securing lever to shaft	1	CT33	513903	Screw	2
CT11	513910	Cam, on shaft	1	CT34	500594	Washer, lock	2
CT12	500593	Pin, taper, securing cam to shaft	1	CT35	502657	Seal, valve operating shaft	1
		HARDWARE, securing main body housing to adaptor plate	1	CT36	502568	Collar, valve operating shaft	1
CT13	WL208	Washer, lock	6			Lever, solenoid	1
CT14	HN2008	Nut	6	CT37	503163	HARDWARE, securing solenoid lever to valve operating shaft	1
CT15	500655	REAR HOUSING ASSEMBLY	1	CT38	505550	Bolt, clamping	1
CT16	500756	Stud	4	CT39	503164	Washer, plain	1
CT17	500759	Stud	2	CT40	513918	Nut	1
		HARDWARE, securing rear housing to main body housing	1	CT41	513919	Screw, adjusting, solenoid	1
CT18	WL208	Washer, lock	6	CT42	500658	Nut, locking adjusting screw	1
CT19	HN2008	Nut	6	CT43	BL20	OPERATING VALVE DETAILS	
		HARDWARE, securing speedometer drive bearing to rear housing	1	CT44	500591	Valve, operating	1
	506071	Screw, set	1	CT45	506070	Ball, steel, 5/16 inch diameter	1
CT20	502566	Washer, copper	1	CT46	506117	Plunger	1
		Bracket Assembly, solenoid	1			Spring	1
CT21	500645	Gasket, between bracket and main body housing	1	CT47	500568	Plug	1
						Washer, sealing plug	1

(Continued on next page.)